

IWTxT Series

WIRELESS TRANSMITTER WITH TX SUPPLY
ADDS WIRELESS FUNCTIONALITY TO ANY 4-20 mA TRANSMITTER



Whilst every effort has been taken to ensure the accuracy of this document, we accept no responsibility for damage, injury, loss, or expense resulting from errors or omissions, and reserve the right of amendment without notice.

Information for users

This equipment has been tested and found to comply with the limits for a Class B device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: To satisfy FCC RF Exposure requirements for mobile and base station transmission devices, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during operation. To ensure compliance operation at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. No other antenna may be used with this equipment other than the PCB antenna supplied with this equipment.

This document may not be reproduced in any way without the prior written permission of the company.

Industrial Interface Systems Ltd
Unit 2 Deer Park Business Centre
Eckington, Pershore, WR10 3DN
www.industrialinterface.co.uk

CONTENTS

1. INTRODUCTION	3
1.1 Safety Information	3
1.2 Hardware Features	3
2. UNPACKING	3
3. PRODUCT IDENTIFICATION LABEL	4
4. INSTALLING/CHANGING THE BATTERY	4
5. SETTING UP THE IWTxT WIRELESS TRANSMITTER	5
6. USB CONFIGURATION	8
7. TROUBLE-SHOOTING GUIDE	10
8. SYSTEM PART NUMBERS	10
9. SPECIFICATIONS	11

1. INTRODUCTION

1.1 Safety Information

This manual contains information that must be observed in the interest of your safety and to avoid damage to assets. Please read this manual before installing and commissioning the device and keep the manual in an accessible location for all users.

Contains FCC ID: W70MRF24J40MDME

Caution: To satisfy FCC RF Exposure requirements for mobile and base station transmission devices, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during operation. To ensure compliance operation at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. No other antenna may be used with this equipment other than the PCB antenna supplied with this equipment.

Please see the Certifications section for more information on RF Exposure Compliance

1.2 Hardware Features

The IWTxT Wireless 4-20 mA Transmitters has been designed to provide an excitation voltage to any standard 4-20 mA transmitter, take a reading and transmit the value to one of the IWR range of receivers where the value can be outputted as either a 4-20 mA or 1-5 V dc signal, or to an IWR-PORT or IWR-USB receiver.

The IWR-1 has a single output and the IWR-5 has five outputs, each of which can be linked to an IWTxT transmitter.

The IWTxT current transformer transmitter works on the license-free 2.4 GHz band.

Ranges of up to 500 m are possible using the standard transmitter and receiver unit with the optional 3dBi antenna giving a range of up to 750 m.

The transmitter is powered by a 3.6 V lithium cell and care must be taken to insert the battery in the correct polarity.

2. UNPACKING

The instrument should be carefully inspected for signs of damage that may have occurred in transit. In the unlikely case that damage has been sustained, DO NOT use the instrument, but please retain all packaging for our inspection and contact your supplier immediately.

3. PRODUCT IDENTIFICATION LABEL

The unit delivered should be carefully inspected to ensure it is suitable for the application required. Detailed information on the product is included in the identification label and the user manual.

Please ensure, that the temperature range of the IWTxT is suitable for the intended application and that the IWTxT unit will not be subjected to temperatures and/or temperatures greater than those specified in this manual.

4. INSTALLING/CHANGING THE BATTERY

A Lithium 3.6 V battery is included inside the IWTxT transmitter. The battery may be changed at any time, but the correct polarity must be observed at all times! After the battery has been changed, SW1 should be pushed for 5s. This is to ensure the battery life count is reset correctly when a new battery is installed.

The internal LED will flash 5 times to indicate this procedure has been carried out successfully.

The battery life is determined by the rate the transmitter sends the Temperature value to the receiver, this update rate can be selected using Dip Switch 1 and the default value is 10s.

A second set of batteries is used to provide the excitation supply to the external 4-20 mA transmitter. Polarity should again be observed when installing this battery pack.

Please dispose of all batteries as specified by the legislator according to the Closed Substance Cycle and Waste Management Act or country regulations.



**! WARNING !
MAKE SURE THE CORRECT
BATTERY POLARITY IS OBSERVED!**




**! WARNING !
INCORRECT BATTERIES MAY DAMAGE THE UNIT
USE ONLY THE SPECIFIED BATTERIES**

5. SETTING UP THE IWTxT WIRELESS TRANSMITTER

The IWTxT instrument is shipped in a default configuration which allows the unit to connect with any default IWR receiver unit and transmit the measured 4-20 mA signal every 1 minute simply by switching the unit on by fitting the battery.

If a different update rate is required, or a different network frequency channel is required these parameters can be selected using the 12-way DIP Switch as detailed below:

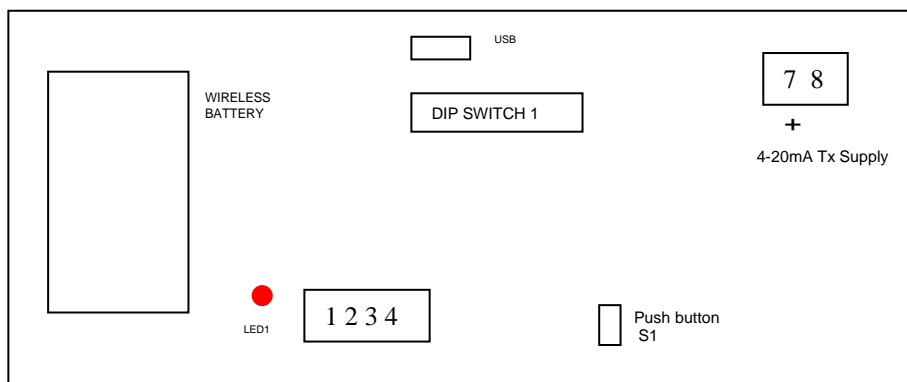

Dip Switches 1, 2, 3 & 4 on the 12 -way Dip Switch select the RF Network the IWTxT will transmit on. The default network for both the IWTxT transmitter and IWR receiver is network 1.

RF NETWORK	1	2	3	4
1	0	0	0	0
2	0	0	0	1
3	0	0	1	0
4	0	0	1	1
5	0	1	0	0
6	0	1	0	1
7	0	1	1	0
8	0	1	1	1
9	1	0	0	0
10	1	0	0	1
11	1	0	1	0
12	1	0	1	1
13	1	1	0	0
14	1	1	0	1
15	1	1	1	0
16	1	1	1	1

Switches 5, 6, & 7 select the Transmission rate of the unit. This effectively sets how often the 4-20 mA value is sent to the receiver. Note that selecting a transmission rate of below 1 minute substantially reduces the battery life.

At 1 and 5 second rate, a power save option is available (on by default) that changes the transmit time to every 30 seconds if the IWR is switched off or out of range for more than 3 minutes. This option can be changed using the IWT-Set or IWUConfig program.

Transmit time	5	6	7
10 seconds	0	0	0
20 seconds	0	0	1
30 seconds	0	1	0
60 seconds	0	1	1
120 seconds	1	0	0
600 seconds	1	0	1
1 second	1	1	0
5 seconds	1	1	1

Switches 8, 9 and 10 set the Channel Number of the transmitter. This is used with the 5 channel receiver unit (IWR-5) to select which Temperature transmitter is linked to which 4-20mA or 1-5Vdc output channel. IWT-Set or IWUConfig can be used to set channel if 8,9,10 are on, up to channel 128.

Tx Channel Number	8	9	10
1	0	0	0
2	0	0	1
3	0	1	0
4	0	1	1
5	1	0	0
6	1	0	1
7	1	1	0
8 or higher	1	1	1


Switches 11 and 12 control the settling time of the 4 – 20 mA transmitter. This is the time that the transmitter is powered up from the transmitter supply before a reading is taken.

Settling time	11	12
0.5 seconds	0	0
1 second	0	1
2 seconds	1	0
4 seconds	1	1

The IWTxT transmitter is now set up and ready to be used. Install the unit as required and remove the pull tab from the battery terminal to switch it on. Pushbutton switch S1 can be pushed to force the unit to transmit its current mA value and LED 1 will flash twice if the transmission has been received and acknowledged by an IWR receiver unit.

If the unit has successfully transmitted the output of the connected receiver unit will output a value reflecting the 4-20 mA level of the transmitter connected.

5.1 Connections

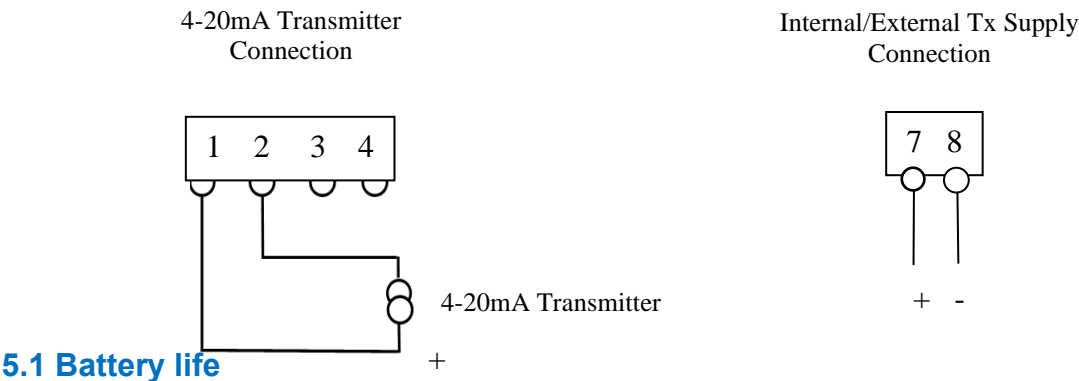

5.1 Battery life

The update rate and settling time affects how long the Excitation and Wireless batteries will last. The following gives the battery life in days with various configurations.

4-20 mA Transmitter Excitation Battery Life

2 off PP3 10.8 V Lithium Thionyl Chloride batteries in series (assume 1000 mAh capacity)

Sleep Time (Sec)	60	120	300	600	30
Sleep Time (Min)	1	2	5	10	0.5
Settling Time (S)					
0.5	440	882	2205	4412	220
1	222	445	1112	2225	110
2	112	225	565	1130	58
4	58	118	292	582	30

So, with a settling time of 0.5 seconds, and a sleep time of 120 seconds, the expected excitation battery life is 882 days.

Wireless Transmitter Battery Life

AA Lithium Thionyl Chloride battery (assume 1000 mAh capacity)

Sleep Time (Sec)	60	120	300	600	30
Sleep Time (Min)	1	2	5	10	0.5
Settling Time (S)					
0.5	1773	2283	2759	2965	1225
1	1308	1858	2485	2799	822
2	859	1355	2072	2517	496
4	509	878	1556	2095	276

So, with a settling time of 0.5 seconds, and a sleep time of 120 seconds, the expected AA battery life is over 6 years.


6. USB CONFIGURATION

More advanced IWTxT settings can be configured using PC software IWUConfig to:

- Set up AES-128 bit security.
- Select a channel number between 9 and 128
- Switch on power save for 1 and 5 second update rates

Open the IWTxT enclosure and connect a micro usb cable to the usb socket.
Push the push button to wake the IWTxT and it should automatically connect to the pc after a few seconds. The red led will be on when it has connected.

Select IWTransmitter from the list of Device Types, select the correct COM Port then click Connect. The COM Port list is refreshed when you select the Device Type.

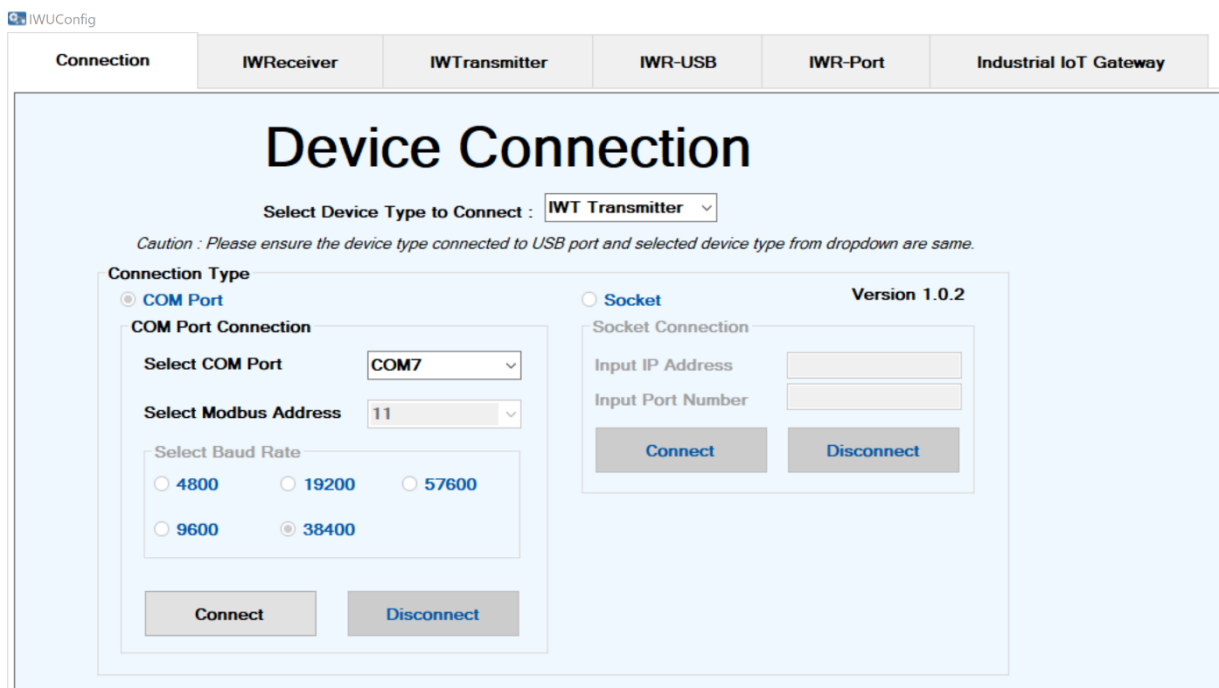

The IWTransmitter tab will open and show details of the sensor connected.

Security can be enabled using the Security controls in the bottom right corner.
To switch security on, select ON in the security drop down box, and click Yes to the Confirmation prompt.




Type in a security key with 16 characters (numbers, letters and special characters can be used) and click Set Key. Click Yes to the Confirmation prompt.



Security :

Security Key :


This exact same security key must be used on the receiver.

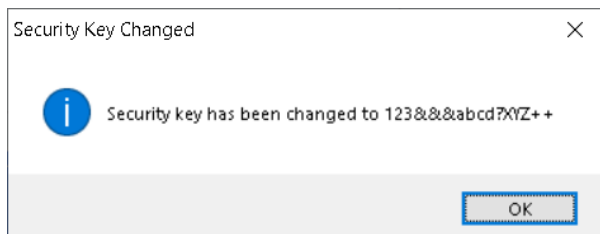

Security Key Changed

 Security key has been changed to 123&&&abcd?XYZ++

Use the extended channel drop down box to select the transmitter channel number that is used when switches 8,9,10 are on. It is channel 8 by default. Channels 1 to 128 can be selected.

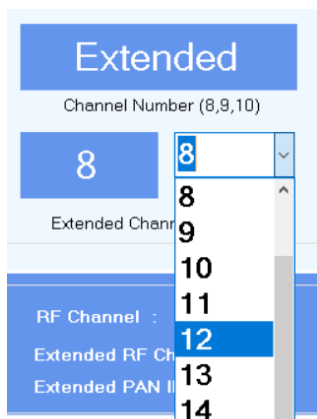

Extended

Channel Number (8,9,10)

Extended Channel :

RF Channel :

Extended RF Channel :

Extended PAN ID :

Use the power save drop down box to enable or disable power save for the 1 and 5 second update rates, to change the transmit time to every 30 seconds if the receiver is switched off or is out of range for more than 3 minutes.



Power Save

7. TROUBLE-SHOOTING GUIDE

Problem encountered	Possible Causes
LED1 doesn't flash when pushbutton S1 is pressed	Pull tab still fitted to battery terminal. The battery is not installed correctly. The battery needs replacing.
LED1 only flashes once when S1 is pressed	IWR receiver not switched on. IWR receiver is not set up for the same RF network. IWR receiver not within range of the transmitter. If an IWR-1 receiver is used, ensure that the transmitter is set to Tx Channel 1
Output from the IWR receiver isn't equivalent to the 4-20mA transmitter being monitored	IWR receiver set up incorrectly, see IWR user manual for further details. Check that the green external LED on the receiver is flashing when the transmitter push button is pressed as the receiver may be out of range.

8. SYSTEM PART NUMBERS

Part Number	Range	Connection
IWTxT-000	4-20 mA with Tx Supply	1. +ve 2. -ve

Part Number	Number of Output Channels
IWR-1	One
IWR-5	Five
IWR-USB	Data from 128 channels
IWR-PORT	Data from 128 channels
IANT-3	3 dBi Antenna
IoT-GATEWAY-000	Data From 128 Channels

9. SPECIFICATIONS

System Performance	
Accuracy (non-linearity & hysteresis)	<±1.0 %
Setting Errors	Zero & Full Scale, <± 1.0%
Media mV ac range	0 to 500mV ac (depending on range selected)
Ambient Temperature	-20 to +80 °C
Storage Temperature	-20 to +80 °C
Weight	310 g
RF Transmitter	Contains FCC W70MRF24J40MDME
Power Requirements	Lithium Thionyl Chloride C 3.6 V Cell
Battery Life	5 Years (10s transmission rate)
Dimensions	79 mm x 79mm x 52mm (L x W x D)
Mounting	Any Orientation

United States FCC

This equipment has been tested and found to comply with the limits for a Class B device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications not expressly approved by Cynergy3 could void the user's authority to operate the equipment.

RF Exposure

Contains FCC ID: W70MRF24J40MDME

In this equipment, the antenna supplied is a PCB antenna and an alternative antenna must not be used.

Caution: To satisfy FCC RF Exposure requirements for mobile and base station transmission devices, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during operation. To ensure compliance operation at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. No other antenna may be used with this equipment other than the PCB antenna supplied with this equipment.

Canada (IC)

English

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of the type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

French

Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il fait choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Europe

The MRF24J40MD/ME wireless module used in this equipment has been tested and is in conformity with the essential requirements and other relevant requirements of the RED Directive 2014/53/EU. That module is in conformity with the following standards and/or other normative documents:

Certification	Standards	Article
Safety	EN60950-1-2006 / A11:2009 / A1:2010 / A12:2011 / A2:2013	(3.1(a))
Health	EN 300 328 V2.1.1 / EN 62479:2010	(3.1(a))
EMC	EN 301 489-1 V2.1.1 EN 301 489-1 V2.2.0 EN 301 489-17 V3.1.1 EN 301 489-17 V3.2.0	(3.1(b))
Radio	EN 300 328 V2.1.1	(3.2)